



**To Use:**

1. Apply LazerMask™ to the flat surface of the item beginning at one end burnishing flat with a plastic squeegee to the opposite end(similar to applying vinyl) to avoid trapped air.
2. Remove the Clear Carrier Film.
3. Laser the image.
4. Sandcarve the item.
5. Paint fill (if desired) while the mask is still on.

**Laser Guidelines:**

Wattage and resolution settings will effect laser burning times, results may vary.

Low wattage Lasers - 25-35 watt 45-65% Speed x 100% Power

Mid - High wattage Lasers - 40-80 watt 80% Speed x 70-100% Power



**Recommended Supplies:**

**Plastic burnisher:** a hand-held, plastic tool used to bind the photomask to the substrate surface and remove the clear carrier sheet from photomask. To use, sweep the burnisher over the applied photomask while applying gentle pressure.